

SDM630-MT(2T)

Smart Three Phase Energy Meter



USER MANUAL

2025 V1.00

Statements

All rights reserved. Without the written permission of the company, no paragraphs or chapters in this manual can be extracted, copied or reproduced in any form. Otherwise, the violator shall bear all consequences.

Eastron reserves all legal rights.

Eastron reserves the right to amend the product specifications in this manual without prior notice. Before placing an order, please contact our company or local agent to get the latest specifications.

CONTENT

Version History 1

Risk Information 2

Chapter 1. Introduction4

 1.1 Product Introduction 4

 1.2 Product Characteristics 4

Chapter 2. Technical Parameters 5

 2.1 Technical Parameters 5

 2.2 Mechanical Characteristics 5

 2.3 Performance Criteria 5

 2.4 Electromagnetic Compatibility 5

 2.5 Safety 6

 2.6 Accuracy 6

 2.7 Tariffs 6

 2.8 Outputs 6

 2.9 Dimensions 7

 2.10 Wiring Diagram 8

Chapter 3. Operation 10

 3.1 Installation Display 10

 3.2 Button Functions 10

 3.3 Measurements 11

 3.4 Auxiliary Mode 17

 3.5 Setup Mode 18

Chapter 4. Declaration of Conformity (For MID meter only)21

Version History

Version	Date	Changes
1.00	2025-6-23	Initial issue

Risk Information

Information for Your Own Safety

This manual does not contain all of the safety measures operating the equipment (module, device) for different conditions and requirements. However, it does contain information which you must know for your own safety and to avoid damages. These information are highlighted by a warning triangle indicating the degree of potential danger.



Warning

This means that failure to observe the instruction can result in death, serious injury or considerable material damage.



Caution

This means hazard of electric shock and failure to take the necessary safety precautions will result in death, serious injury or considerable material damage.

Qualified personnel

Operation of the equipment (module, device) described in this manual may only be performed by qualified personnel. Qualified personnel in this manual means person who are authorized to commission, start up, ground and label devices, systems and circuits according to safety and Regulatory standards.

Proper handling

The prerequisites for perfect, reliable operation of the product are proper transport, proper storage, installation and proper operation and maintenance. When operating electrical equipment, parts of this equipment automatically carry dangerous voltages. Improper handling can therefore result in serious injuries or material damage.

- ✧ Use only insulating tools.
- ✧ Do not connect while circuit is live (hot).
- ✧ Place the meter only in dry surroundings.
- ✧ Do not mount the meter in an explosive area or expose the meter to dust, mildew and insects.
- ✧ Make sure the wires are suitable for the maximum current of this meter.
- ✧ Make sure the AC wires are connected correctly before activating the current/voltage to the meter.
- ✧ Do not touch the meter connecting clamps directly with metal, blank wire and your bare hands as you may get electrical shock.
- ✧ Make sure the protection cover is placed after installation.
- ✧ Installation, maintenance and reparation should only be done by qualified personnel.
- ✧ Never break the seals and open the front cover as this might influence the function of the meter, and will cause no warranty.
- ✧ Do not drop, or allow strong physical impact on the meter as the high precisely components inside may be damaged.
- ✧ Designed to be mounted inside of switchboards or cabinet on DIN rail.
- ✧ This device must have a suitable sized Circuit Breaker feeding the Multi Function Energy Meter so it

does not exceed the maximum rated current.

- ✧ The supply wiring of this device shall be suitable sized cable to match the installed circuit breaker.
- ✧ A Disconnection Device (Circuit Breaker) should be installed close to the Multi Function Energy Meter.
- ✧ The Disconnection Device shall be marked as the Disconnection Device for the Multi Function Energy Meter.

Disclaimer

We have checked the contents of this publication and every effort has been made to ensure that the descriptions are as accurate as possible.

However, deviations from the description cannot be completely ruled out, so that no liability can be accepted for any errors contained in the information given. The data in this manual is checked regularly and the necessary corrections are included in subsequent editions. We are grateful for any improvements that you suggest.

Chapter 1. Introduction

1.1 Product Introduction

SDM630-MT and SDM630-2T are Eastron's new-generation three-phase smart energy meters.

The meter measures and displays the characteristics of single phase two wire (1p2w), three phase three wire (3p3w) and three phase four wire (3p4w) supplies, including voltage, frequency, current, power, active and reactive energy, imported or exported. Energy is measured in terms of kWh, kVarh. Maximum demand current can be measured over preset periods of up to 60 minutes.

These units are Max. 100A direct connected and do not need to connect with external current transformers(CT). An RS485 communication port is available on the meters for remote data transmission.

1.2 Product Characteristics

- Bi-directional measurement IMP & EXP
- RS485 Modbus RTU
- Multi-parameters measurement
- LCD with white backlit, adjustable backlit time
- Multi-tariffs(RTC) or 2 tariffs(dual power source) available

Measurements:

- Phase voltage: V1, V2, V3
- Line voltage: V1-2, V2-3, V3-1
- Current: I1, I2, I3
- Active power: P1, P2, P3, P_total (total active power)
- Reactive power: Q1, Q2, Q3, Q_total (total reactive power)
- Apparent power: S1, S2, S3, S_Total (total apparent power)
- Frequency: Hz
- Power factor: PF
- Active energy: Ep_imp (import active energy), Ep_exp (export active energy), Ep_total (total active energy)
- Reactive energy: Eq_imp (import reactive energy), Eq_exp (export reactive energy), Eq_total (total reactive energy)
- THD-I and THD-U
- Maximum demand: MD

Setup:

- Modbus parameters
- Demand interval time
- Backlit time
- Supply system 1p2w, 3p3w, 3p4w
- Clear Max. demand info
- Password modification
-

Chapter 2. Technical Parameters

2.1 Technical Parameters

Voltage AC (Un)	3*230/400V AC
Voltage Range	100 - 277V AC (L-N)
Voltage Between Phase	100 to 480V AC (L-L)
Current Input	0.3-10(100)A
Starting Current (Ist)	0.04A
Transition Current (Itr)	1A
Over Current Withstand	30I _{max} for 0.01S
Frequency Rating Value	50/60Hz
AC Voltage Withstand	4KV/1min
Impulse Voltage Withstand	6kV – 1.2/50μS waveform
Voltage Circuit Power Consumption	≤ 2W/10VA
Current Circuit Power Consumption	≤0.05VA
Display	LCD with white backlit
Max. reading	999999.99 kWh/kVArh

2.2 Mechanical Characteristics

Weight	≈325g
IP Degree of Protection (IEC 60529)	IP51 front display IP20 whole meter
Dimensions (DxHxW)	66*100*72mm
Mounting	DIN Rail 35mm
Material of Meter Case	Self-extinguishing UL 94 V-0
Mechanical Environment	M1

2.3 Performance Criteria

Operation Humidity	≤90% Non-condensing
Storage Humidity	≤95% Non-condensing
Operating Temperature	-40℃~+70℃
Storage Temperature	-40℃~+80℃
Pollution Degree	2
Altitude	≤2000m
Vibration	10Hz to 50Hz, IEC 60068-2-6

2.4 Electromagnetic Compatibility

Electrostatic Discharge	IEC 61000-4-2
Immunity to Radiated Fields	IEC 61000-4-3
Immunity to Fast Transients	IEC 61000-4-4
Immunity to Impulse Waves	IEC 61000-4-5
Conducted Immunity	IEC 61000-4-6
Immunity to Magnetic Fields	IEC 61000-4-8
Immunity to Voltage Dips	IEC 61000-4-11

Radiated Emissions	EN55032 Class B
Conducted Emissions	EN55032 Class B

2.5 Safety

Over-voltage Category	CAT III
Installation Category	CAT III
Insulating Encased Meter of Protective Class	II

2.6 Accuracy

Parameters	Accuracy	Resolution
Voltage	±0.5%	0.1V
Current	±0.5%	0.001A
Frequency	±0.2%	0.01Hz
Power Factor	±0.01	0.001
Active Power	±1%	0.001kW
Reactive Power	±1%	0.001kVAr
Apparent Power	±1%	0.001kVA
Active Energy	Class 1 or 0.5 IEC62053-21 Class B or C EN50470-3:2022	0.01kWh
Reactive Energy	Class 2 IEC 62053-23	0.01kVArh

2.7 Tariffs

2.7.1 Dual Source Measure - 2 tariffs

SDM630-2T can measure energy from two different power supplies upon detection of a 230V voltage signal. For example, when public grid is power off and electric generator is on, the meter switches to tariff 2 measurement automatically.

The meter can also be used as a tariff meter. The tariff is controlled by an external time relay.

2.7.2 Multi-tariffs

SDM630-MT is a multi-tariff electricity meter controlled by an RTC (Real-Time Clock). This meter supports the configuration of 4 different tariffs and 8 time segments. The time clock error is within ± 1 s per day.

2.8 Outputs

2.8.1 RS485 Modbus RTU


For Modbus RTU, the following RS485 communication parameters can be configured from the Set-up menu:

Bus Type	RS485
Communication Protocol	Modbus RTU
Baud Rate	2.4k/4.8k/9.6k(default)/19.2k /38.4k bps
Address Range	001 to 247
Max. Bus Load	64 PCS
Communication Distance	1000m

Parity Bit	none(default)/ odd / even
Stop Bit	1 or 2
Data Bits	8

2.8.2 Pulse output


The meter is equipped with pulse outputs, which are fully isolated from the inside circuit. They generate pulses in proportion to the measured energy. The pulse output is polarity dependent, passive transistor output requiring an external voltage source for correct operation. For this external voltage source, the voltage shall be 5-27V DC, and the maximum input current shall be 27mA DC.

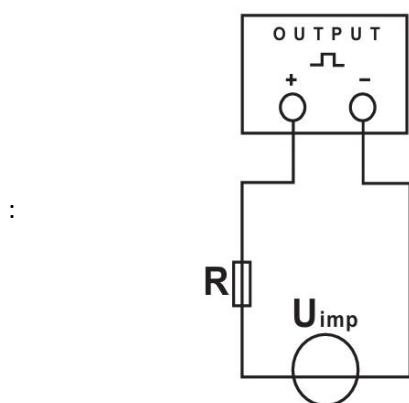

ATTENTION: Pulse output must be fed as shown in the wiring diagram on the left.
 Scrupulously respect polarities and the connection mode.
 Opto-coupler with potential-free SPST-NO Contact.
 Contact range 5~27VDC
 Max. current Input: 27mA DC


Pulse outputs type	Two independent channels of optocoupler passive pulse outputs	
Pulse output 1 (configurable)	Type	kWh/kVAh (total, imported, exported) Default: exported kWh
	Constant	dFt, 0.01, 0.1, 1, 10, 100 kWh/kVAh per imp Default: dFt = 0.0025 kWh/imp
	Width	200, 100, 60mS Default: 100mS
Pulse output 2 (fixed)	Type	Total kWh
	Constant	400imp/kWh
	Width	100mS

2.9 Dimensions

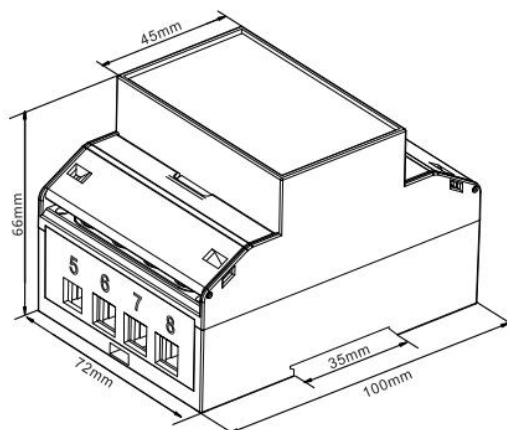


Height: 100mm
 Width: 72mm
 Depth: 66mm

2.10 Wiring Diagram

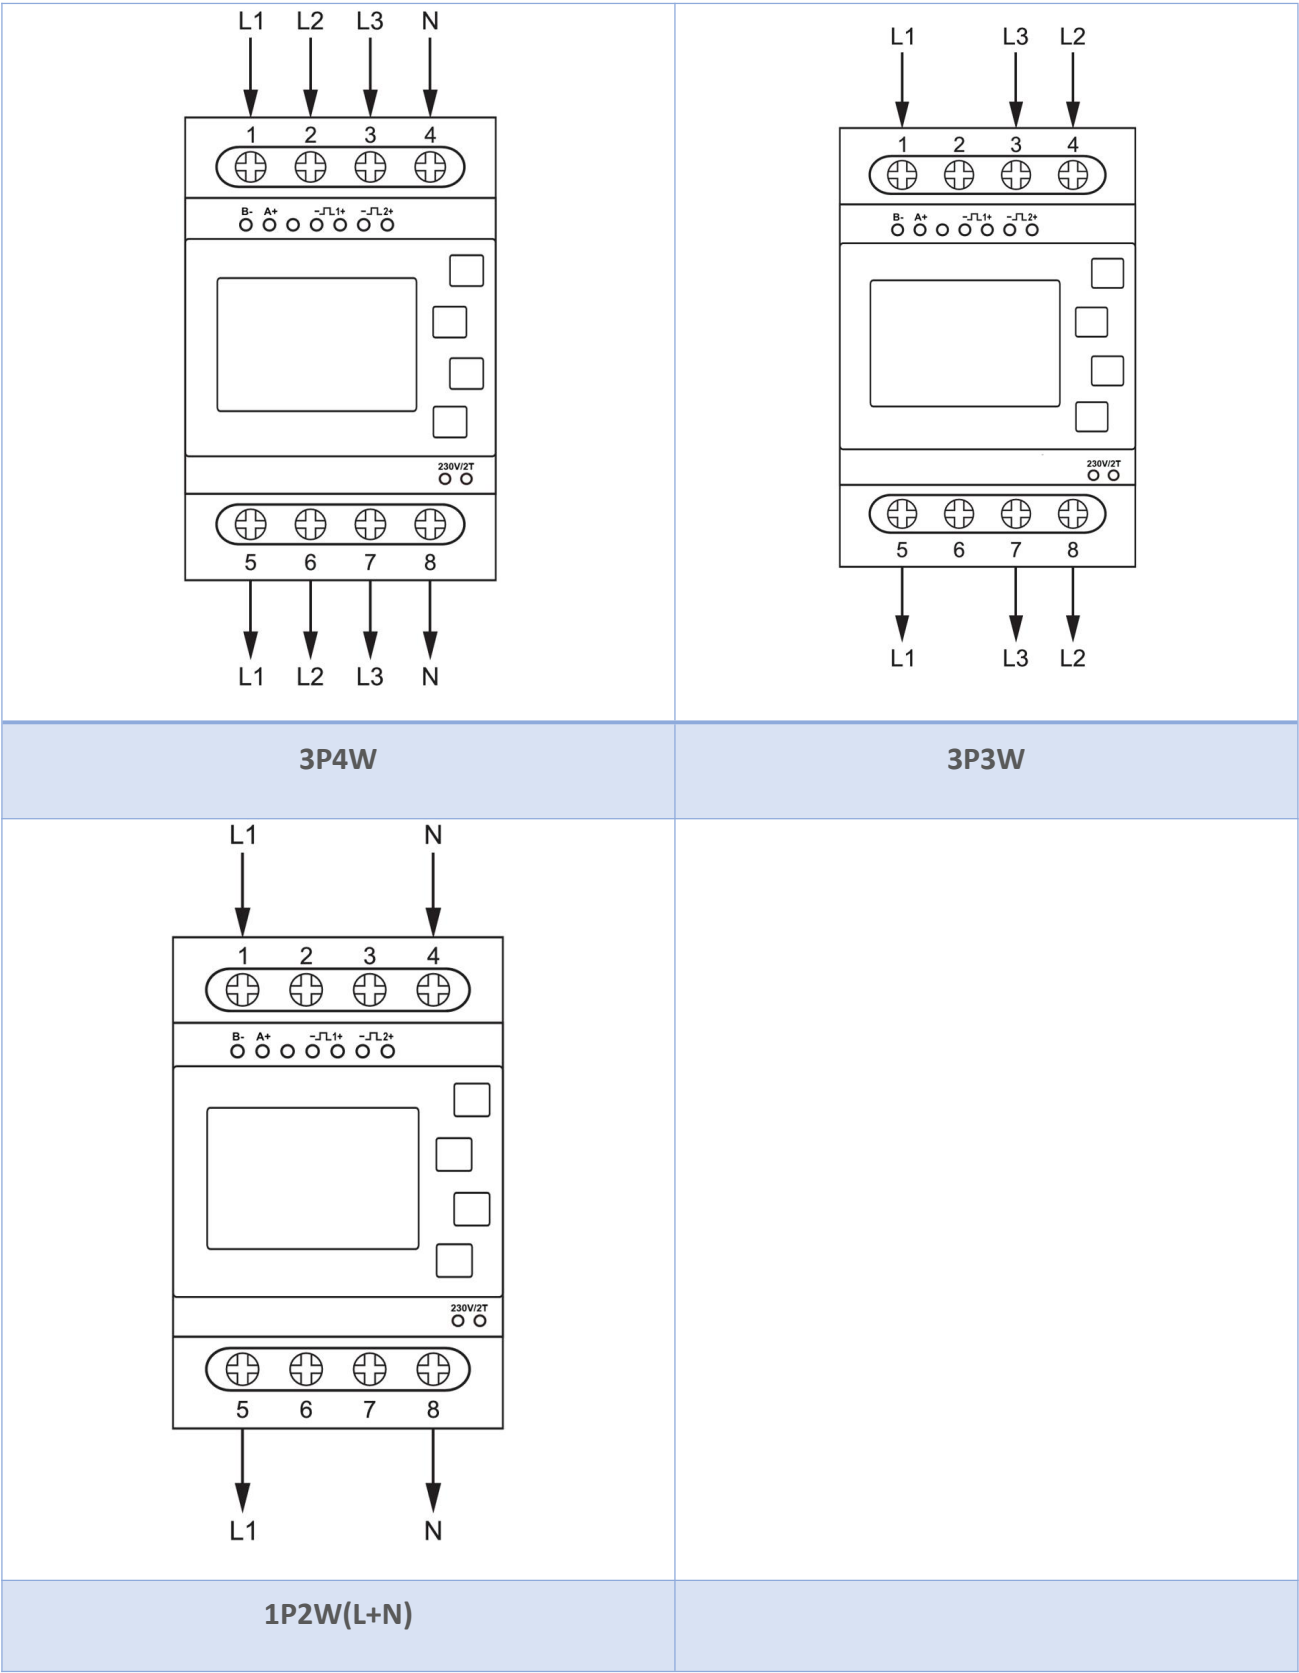





*230V/2T terminal for SDM630-2T only

Wiring Guide



Terminal ①~⑧	Measurement Connection	Screw Connection
	Strip Length	12-13mm
	Screw	M5
	Rigid/Supple	4-25mm ² (11~4AWG)
	Tightening Torque	3.5Nm
	Model	PH2
	Measurement Connection	Screw Connection
	Strip Length	5-6mm
	Rigid/Supple	0.5-1.5mm ² (22 ~ 14AWG)
	Tightening Torque	0.4Nm
	Model	PH0

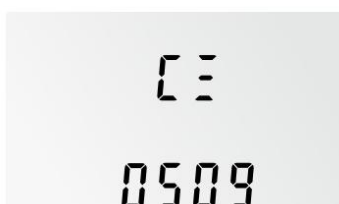

Chapter 3. Operation

3.1 Installation Display

	The first screen lights up all display segments and can be used as a display check.
	The second screen show software version. Note: the actual display may be differ from the picture show in left.
	The third screen show program number. Note: the actual display may be differ from the picture show in left.
	The interface performs a self-test and indicates the result if the test passes.

3.2 Button Functions




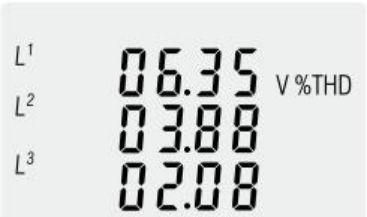
Button	Short click		Long press (3s)	
	Display mode	Setup mode	Display mode	Setup mode
	V1 V2 V3 V1-2 V2-3 V3-1 I1 I2 I3 V %THD I %THD	Return to previous menu		
	Hz PF PF1 PF2 PF3 MD of I1 I2 I3 MD of Power	Previous page or increase value	Address Baud rate Parity bit CRC All display segments	


	P1 P2 P3 Q1 Q2 Q3 S1 S2 S3 P-t Q-t S-t	Next page or decrease value		
	Active E-t Imp Active E Exp Active E T1 T2 T3 T4 Active E Reactive E-t Imp Reactive E Exp Reactive E T1 T2 T3 T4 Reactive E Date Time	Move to right side	Enter setup mode	Confirm setting
Note: The display of SDM630-2T is different. Please refer to the following content for detailed information.				

3.3 Measurements

3.3.1 Voltage and current





Each successive pressing of the  button selects a new range:

	Phase to neutral voltage (Not available under 3P3W)
	Phase to phase voltage (Not available under 1P2W)
	Current of each phase
	Phase to neutral voltage THD% (Phase to phase voltage THD% under 3P3W)

	Phase current THD%
---	--------------------


3.3.2 Frequency, Power factor and Demand

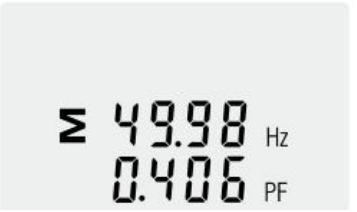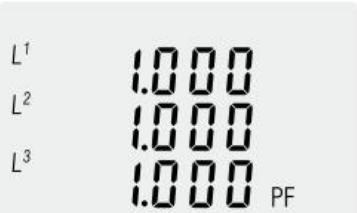Each successive pressing of the  button selects a new range:

	Frequency and Power Factor (total)
	Power Factor of each phase (Not available under 3P3W & 1P2W)
	Maximum current demand of each phase
	Maximum total power demand

3.3.3 Power



Each successive pressing of the  button select a new range:



	Instantaneous Active Power in kW (Not available under 3P3W &1P2W)
	Instantaneous Reactive Power in kVAr (Not available under 3P3W &1P2W)
	Instantaneous Volt-amps in kVA (Not available under 3P3W &1P2W)
	Total kW, kVAr, kVA




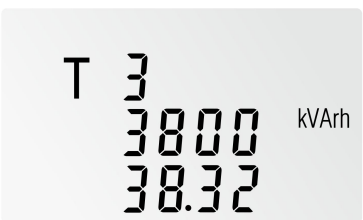
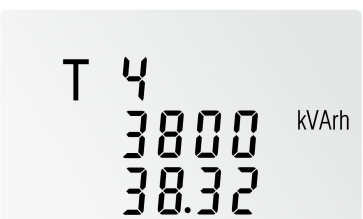

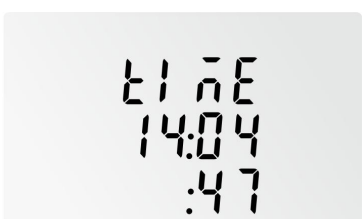
3.3.4 Energy




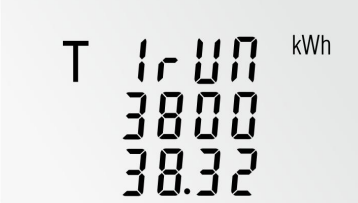
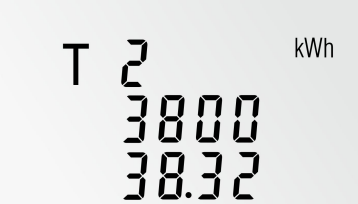
Each successive pressing of the button shows following measurements:
SDM630-MT

	Total active energy in kWh
	Imported active energy in kWh

	Exported active energy in kWh
	Tariff 1 active energy in kWh (T1 run means under T1 calculation)
	Tariff 2 active energy in kWh
	Tariff 3 active energy in kWh
	Tariff 4 active energy in kWh
	Total reactive energy in kVArh
	Imported reactive energy in kVArh



	Exported reactive energy in kVArh
	Tariff 1 reactive energy in kVArh (T1 run means under T1 calculation)
	Tariff 2 reactive energy in kVArh
	Tariff 3 reactive energy in kVArh
	Tariff 4 reactive energy in kVArh
	Date
	Time


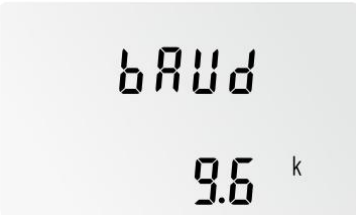



SDM630-2T:

	Total active energy in kWh
	Total reactive energy in kVAh
	T1 active energy in kWh (T1 run means under T1 calculation)
	T2 active energy in kWh
	T1 reactive energy in kVAh (T1 run means under T1 calculation)
	T2 reactive energy in kVAh


*SDM630-2T shows tariff kWh/kVAh instead of imported and exported kWh/kVAh.

3.4 Auxiliary Mode


Each successive Long pressing of the  button enter the auxiliary and each successive pressing of the  button select a new range:
SDM630-MT:

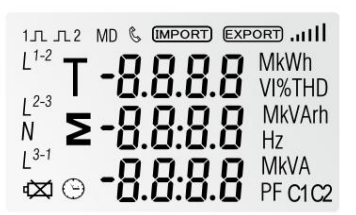	Address
	Baud rate
	Parity bit
	CRC
	All display segments



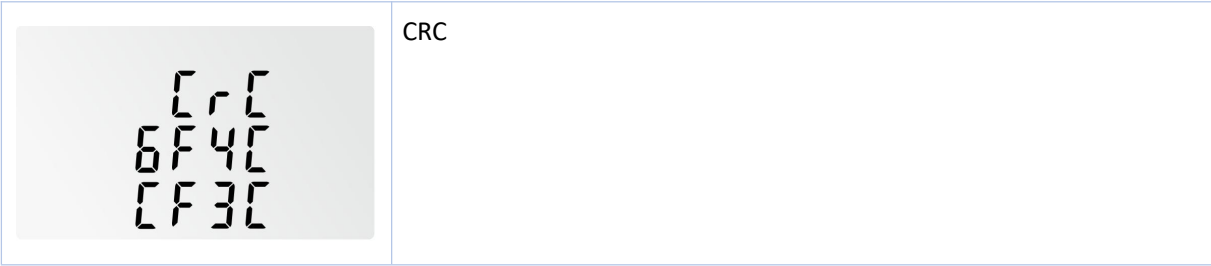







SDM630-2T:



3.5 Setup Mode

The meter’s settable parameters are password protected. Each successive Long pressing on the  button to enter setup mode. Some menu items, such as password and CT, require a four-digit number entry while others, such as supply system, require selection from a number of menu options.






3.5.1 Menu Option Selection


- 1.Use the  and  buttons to scroll through the different options of the set up menu.
 - 2.Long press  to confirm your selection.
 - 3.If an item flashes, then it can be adjusted by the  and  buttons.
 - 4.Having selected an option from the current layer, long press  to confirm your selection.
 - 5.Having completed a parameter setting, press  to return to a higher menu level.
- You will be able to use the  and  buttons for further menu selection.
- 6.On completion of all setting-up, press  repeatedly until the measurement screen is restored.

3.5.2 Number Entry Procedure

When setting up the unit, some screens require the entering of a number. In particular, on entry to the setting up section, a password must be entered. Digits are set individually, from left to right.


The procedure is as follows:

- 1.The current digit to be set flashes and is set using the  and  buttons.
- 2.Short press  to confirm the digit setting and remove to the next.
- 3.After setting the last digit, long press  to confirm the setting.
- 4.Press  to return to a higher menu level.

Settings interface	Set status	Optional configuration
		Password Default: 1000

		Address setting Range: 001~247 Default: 001
		Baud rate setting Option: 2.4k, 4.8k, 9.6k, 19.2k, 38.4k bps Default: 9.6k bps
		Parity bit setting Option: EVEN, ODD, NONE Default: NONE
		Stop bit setting Option: 1, 2 Default: 1
		Pulse output setting Option: kWh or kVArh, import, exported or total. Default: exported kWh
		Pulse rate setting Option: dFt, 0.01, 0.1, 1, 10, 100 kWh/kVArh per imp Default: dFt = 0.0025 kWh/kVArh per imp
		Pulse duration setting Option: 200, 100, 60mS Default: 100mS

		Demand interval time setting Option: 0, 5, 8, 10, 15, 20, 30, 60min Default: 60min
		Backlit time setting Option: 0, 10, 30, 60, 120, 121 min SDM630-MT Default: 0 SDM630-2T Default: 60 min
		System type setting Option: 3P4W, 3P3W, 1P2W Default: 3P4W
		CLR Max. demand setting
		Password setting Range: 0000~9999 Default: 1000
		Date setting Year range: 2000~2099 Month range: 1~12 Day range: Obtain based on year and month Format: year-month-day Only for SDM630-MT
		Time setting Hour range: 00~23 Min range: 00~59 Sec range: 00~59 Format: hour-min-sec Only for SDM630-MT

		View tariff and time segments info - 4 Tariffs - 8 Time segments Only for SDM630-MT
---	--	---

Chapter 4. Declaration of Conformity (For MID meter only)

We, Zhejiang Eastron Electronic Co., Ltd. declares under our sole responsibility as the manufacturer that the three phase multi-function electrical energy meter SDM630-M correspond to the production model described in the EU-type examination certificate and the requirements of the Directive 2014/32/EU.

Type examination certificate number 0120/SGS0703.

Identification number of the Notified Body: 0598.

If you have any question, please feel free to contact our sales team.

Eastron Electronic Co., Ltd.

No. 52, Dongjin Road, Nanhu, Jiaying, Zhejiang, China

Tel: +86-573-83698881 Fax: +86-573-83698883

Email: sales@eastrongroup.com

www.eastrongroup.com

